



# SW- SPECIAL FUNCTION FNT-03 (SDD/SBB)



Code: **D729721ZB**

## NEW ITEMS:

The special new ZZ FNT-03 function is used with SDD/SBB to read PIN CODES directly for **SOME** of the models listed in the table.

**ATTENTION:** the PIN CODE is memorized in the vehicle control panel. There are 4 different suppliers of control panels for the vehicles in the VAG Group (VDO, Motormeter, Magneti Marelli, Nippon Seiki) and these 4 suppliers provide hundreds of different systems (we cannot know how many of these systems are on the market).

SDD/SBB is able to read the PIN CODE of 114 different systems (107 VDO + 7 Motormeter).

CONTROL PANELS SUPPLIERS														
	FROM	TO	VDO			MOTORMETER			MAGNETI MARELLI			NIPPON SEIKI		
			FNT1 4sys	FNT2 9sys	FNT3 107sys	FNT1	FNT2 3sys	FNT3 7sys	FNT1	FNT2	FNT3	FNT1	FNT2	FNT3
<b>AUDI</b>														
A4	1997	1999	X	X	X									
A4	1999	2001		X	X		X	X						
A4	2001	2004			X			X						
A6	1997	1999	X	X	X									
A6	1999	2001		X	X		X	X						
A6	2001	2004			X			X						
S4	2001	2004			X			X						
S6	1997	1999	X	X	X									
S6	1999	2001		X	X		X	X						
S6	2001	2004			X			X						
<b>SEAT</b>														
CORDOBA	1999	2001		X	X		X	X						
CORDOBA	2001	2004			X			X						
LEON	2001	2004			X			X						
TOLEDO	2001	2004			X			X						
<b>SKODA</b>														
OCTAVIA	1997	2000	X	X	X	X	X	X						
OCTAVIA	2000	2004			X			X						
FABIA	2001	2004			X			X						
<b>VOLKSWAGEN</b>														
BORA	1998	1999	X	X	X									
BORA	1999	2001		X	X		X	X						
BORA	2001	2004			X			X						
GOLF	1997	1999	X	X	X									
GOLF	1999	2004			X			X						
PASSAT	1997	1999	X	X	X									
PASSAT	1999	2001		X	X		X	X						
PASSAT	2001	2004			X			X						
POLO	2001	2004			X			X						
SHARAN	2001	2004			X			X						
T4	2001	2004			X			X						
T5	2001	2004			X			X						

**NOTE:** To programme VAG keys it is necessary to use the PIN CODE on the black plastic tab consigned to purchasers with the vehicle keys.

If the PIN CODE is lost or cannot be read with the FNT-03 function, it must be obtained from a VAG dealer, communicating the IMMO ID and the vehicle chassis number.

To enable the new function, apply for a PSW for enabling the ZZ FNT-03 function, using the form provided. When you have the password, select:

SETTINGS => ENABLE => IMMOBILIZER => ZZ FNT-03 => LEVEL 0;

Digit the PASSWORD and press ENTER.

## PROGRAM INSTALLATION

- See instructions booklet provided with CD