



SW- PRG TOYOTA®/LEXUS® (USA) - L0 (SDD/SBB)

Code: **D723624ZB**

NEW ITEMS INTRODUCED WITH THE UPDATE:

1) This SW makes it possible to:

- Programme/erase keys (Data cards);
- Check for anomalies stored in the immobilizer memory;
- Delete anomalies stored in the immobilizer memory;
- Reset the immobilizer central unit (erase all the keys and re-programme master and valet keys).

To enable the new MAKE use the special FORM to apply for a TOYOTA® - LEXUS® L0 enabling PSW.

When in possession of the PSW, select:

SETTINGS => ENABLING => IMMOBILIZER => LEXUS® => LEVEL 0;

insert the PASSWORD and press **ENTER**.

PROGRAM INSTALLATION

See instructions booklet provided with CD