

SDD
SilcaDiagnosticDevice

SBB

**SW- RKE TOYOTA/LEXUS[®] (USA) -L0
(SDD/SBB)**

CODE: D431410XA - VERS. 2.0



INDEX

1	REMOTE CONTROL FUNCTIONS MENU TOYOTA/LEXUS.....	3
1.1	PROGRAMME RKE	4
1.2	ERASE RKE	5

SW- RKE TOYOTA/LEXUS® USA L0 (SDD/SBB)





1 REMOTE CONTROL FUNCTIONS MENU TOYOTA/LEXUS


MODEL	From	to	Reference	RKE #	Position Conn
LEXUS					
GS300	2002	2005	ORIGINAL	10	C13
GS430	2001	2005	ORIGINAL	10	C13
GX470	2003	2005	ORIGINAL	10	C13
IS300	2002	2005	ORIGINAL	10	C13
LS430	2001	2003	ORIGINAL	10	C13
LX470	2003	2005	ORIGINAL	10	C22
RX330	2004	2005	ORIGINAL	10	C13
SC430	2002	2005	ORIGINAL	10	C13
TOYOTA					
Land Cruiser	2003	2004	ORIGINAL	10	C13

The functions on these vehicles are:


- Programme/Erase remote controls

The following are needed to use this function:


	 SWITCH ADAPTER
 CABLE OBD II [00]	PIN CODE
 Remote control to be programmed	

SBB	CABLE/ADAPTER
	 CABLE OBD II [00] (STANDARD)

DIAGNOSIS CONNECTOR POSITIONS

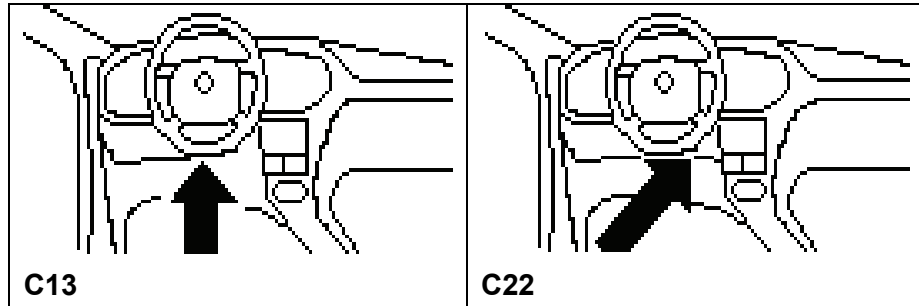

There is already a key turned to the **ON** position in the ignition block.
The display shows:

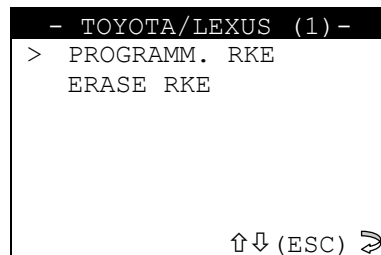


- Select and press **ENTER**.

1.1 PROGRAMME RKE


This function is used to programme remote controls. The initial situation must be all doors closed without the safety lock on.

- To activate the function select "**PROGRAMME RKE**" and press **ENTER**.

The display will show:

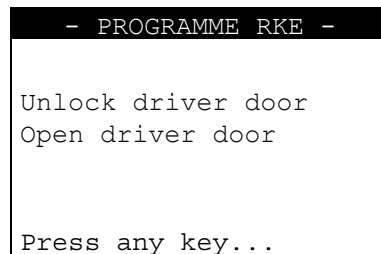

- Unlock driver door and open;
- Press any key to continue.

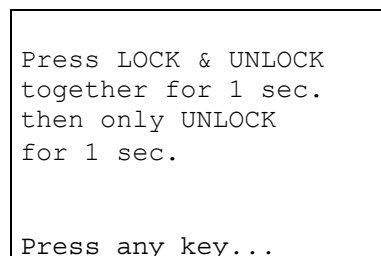

Using the remote control to be programmed, press the "**LOCK** and **UNLOCK**" buttons simultaneously for one second, then press the "**UNLOCK**" button.

Note: the entire operation must be carried out quickly (in approx. 3 seconds).

If communication and data exchange have been successful, the display will show:

THE REMOTE CONTROL IS
PROGRAMMED

Press any key...

The remote control has now been programmed.

- Press any key to return to the RKE functions menu.

1.2

ERASE RKE

This function is used to erase all the remote controls except the one being used.

- To activate the function select "**ERASE RKE**" and press **ENTER**.

The display will show:

- ERASE RKE -

Unlock driver door
Open driver door

Press any key...

- Unlock driver door and open;
- Press any key to continue.

Press LOCK & UNLOCK
together for 1 sec.
then only UNLOCK
for 1 sec.

Press any key...

U Using the remote control to be programmed, press the "**LOCK** and **UNLOCK**" buttons simultaneously for one second, then press the "**UNLOCK**" button.

Nota: the entire operation must be carried out quickly (in approx. 3 seconds).

If communication and data exchange have taken place successfully, the display will show:

All the RKE Has been
erased

Press any key...

All the remote controls have now been erased.

- Press any key to return to the RKE functions menu.



SILCA S.p.A.
Via Podgora, 20 (Z.I.)
31029 VITTORIO VENETO (TV)
Tel. 0438 9136 Fax 0438 913800
www.silca.it

In the United Kingdom
SILCA Ltd.
Kimpton Road - Sutton
SURREY SM3 9QP
Tel. 0208 6416515
Fax 0208 6441181
E-mail: sales@silcald.co.uk

In Germany
SILCA GmbH
Siemensstrasse, 33
42551 VELBERT
Tel. 02051 2710
Fax 02051 271172
E-mail: info@silca.de

In France
SILCA S.A.
78440 PORCHEVILLE
Tel. 01 30983500
Fax 01 30983501
E-mail: info@silca.fr

In Spain
SILCA KEY SYSTEMS S.A.
C/Santander 73A
BARCELONA - SPAIN
Tel. 0034 934981400
Fax 0034 932788004
E-mail: silca@silca.es

Members of the Kaba Group

